


Kabinenverkleidung

Kunststofflamine für Wände




ABET 1022
MANDARIN

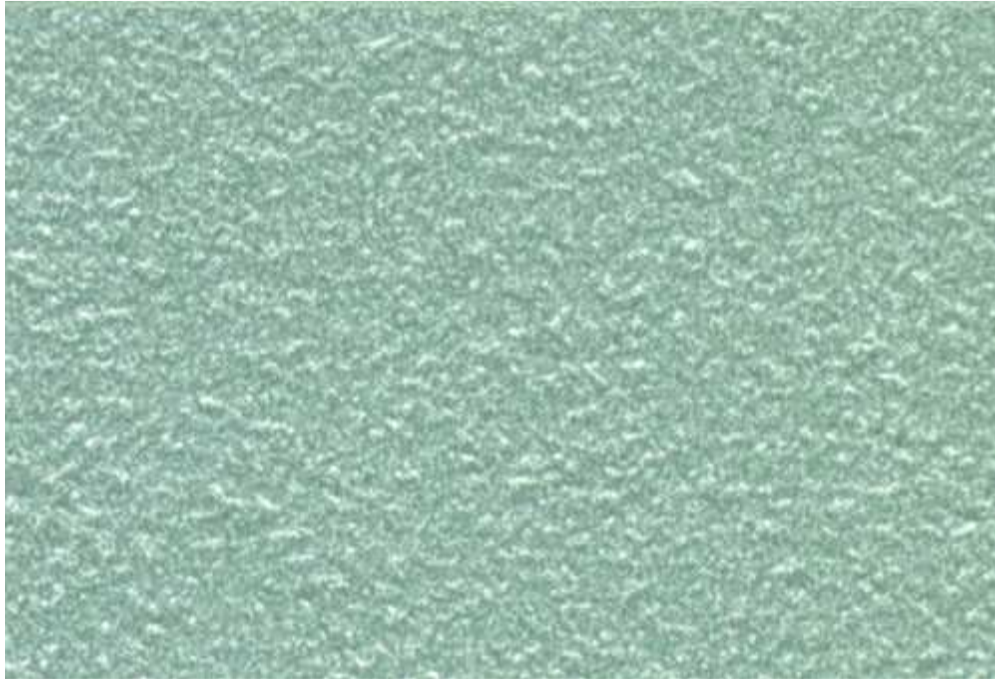

ARPA 2417
QUARZO



ABET 1015
MANDARIN

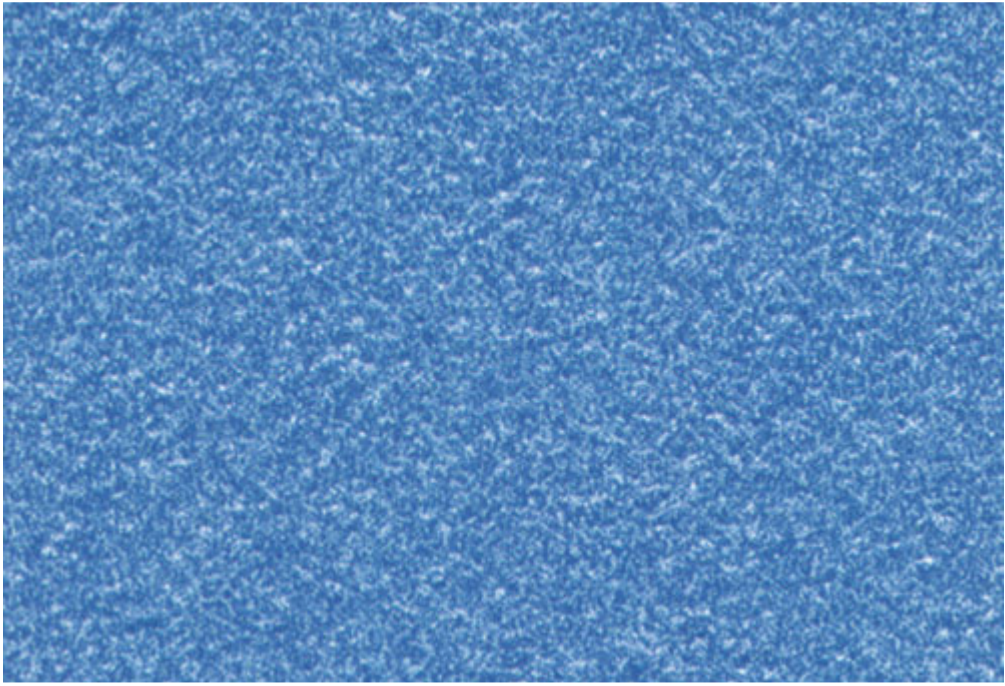

ABET 1026
MANDARIN



ABET 386
ROVERE NAZIONALE



ABET 388
DOUGLAS




ABET 1642
PERO ITALIANO



ABET 1636
NOCE ITALIANO

Skinplate für Wände

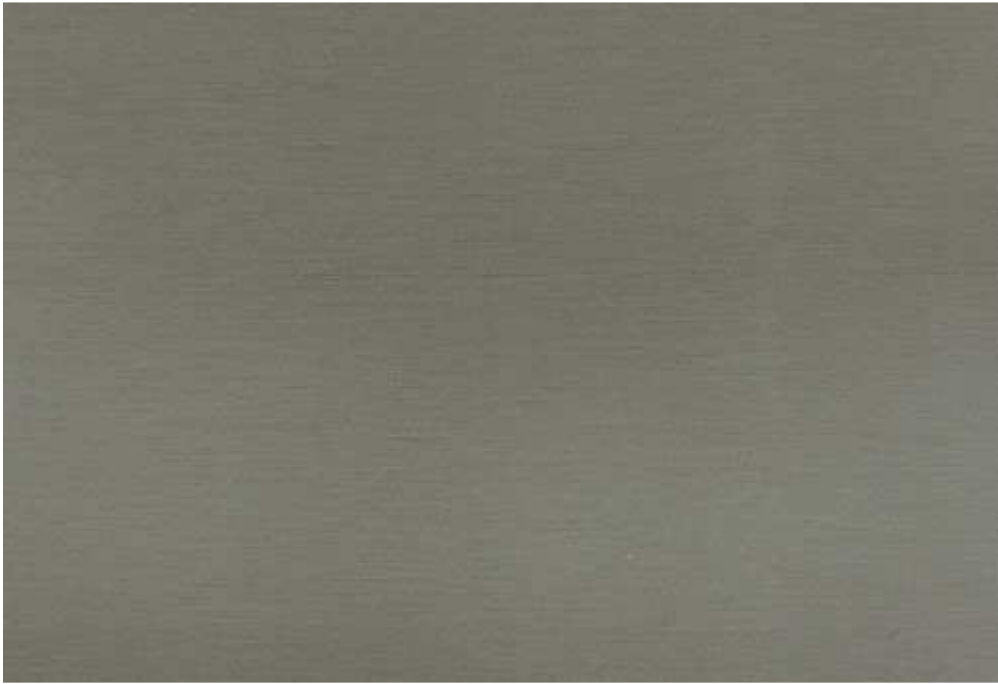


F12PPS



PPS12



A13

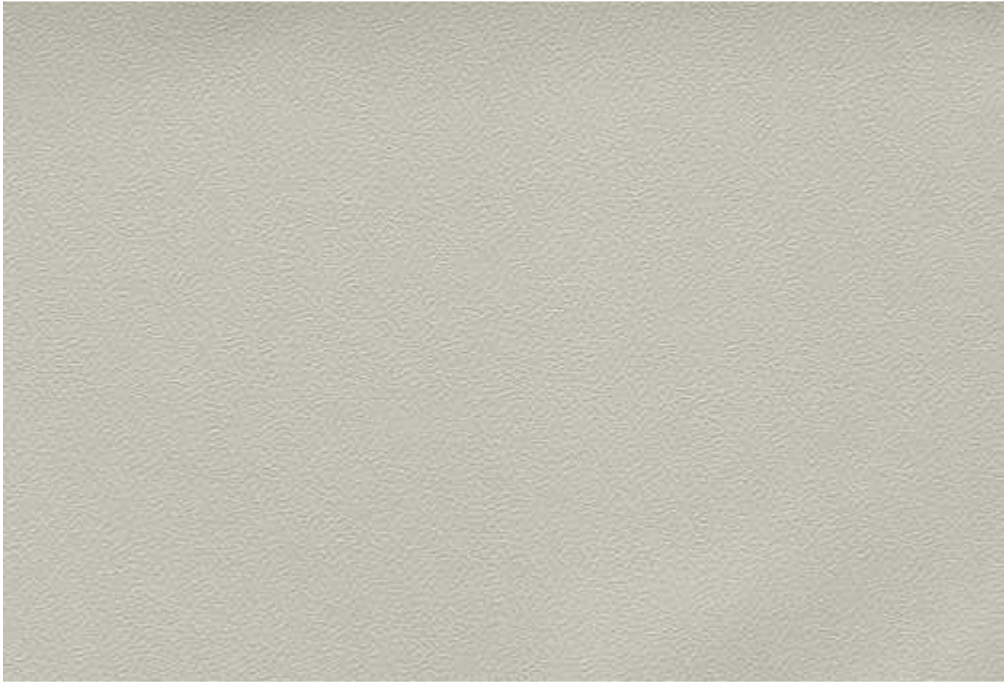


N1



PPS10



V14

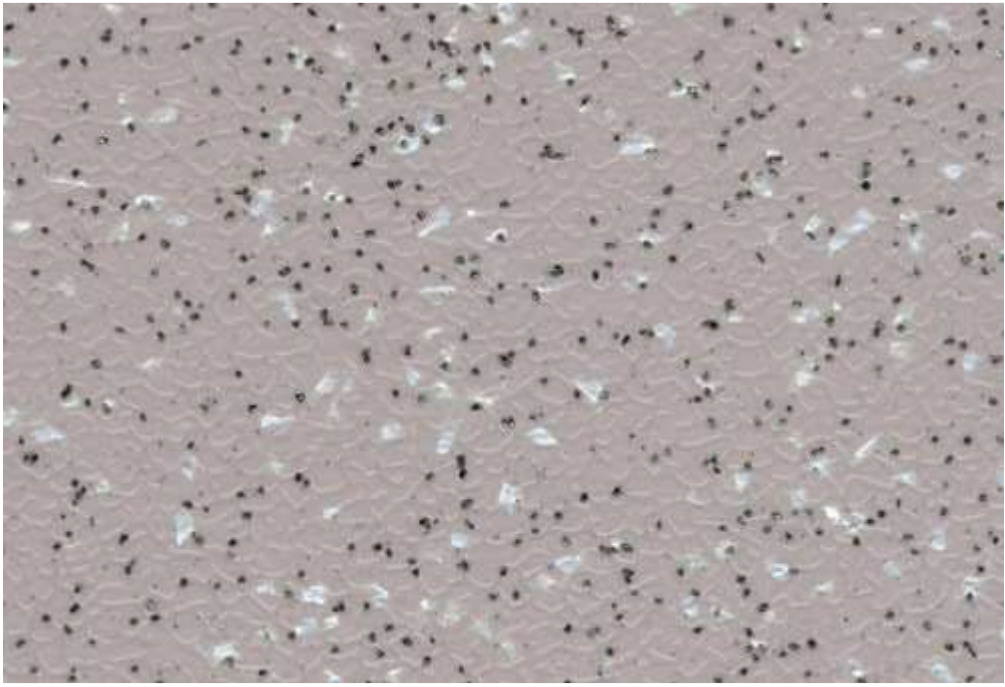


B13



PPS28




PPS11

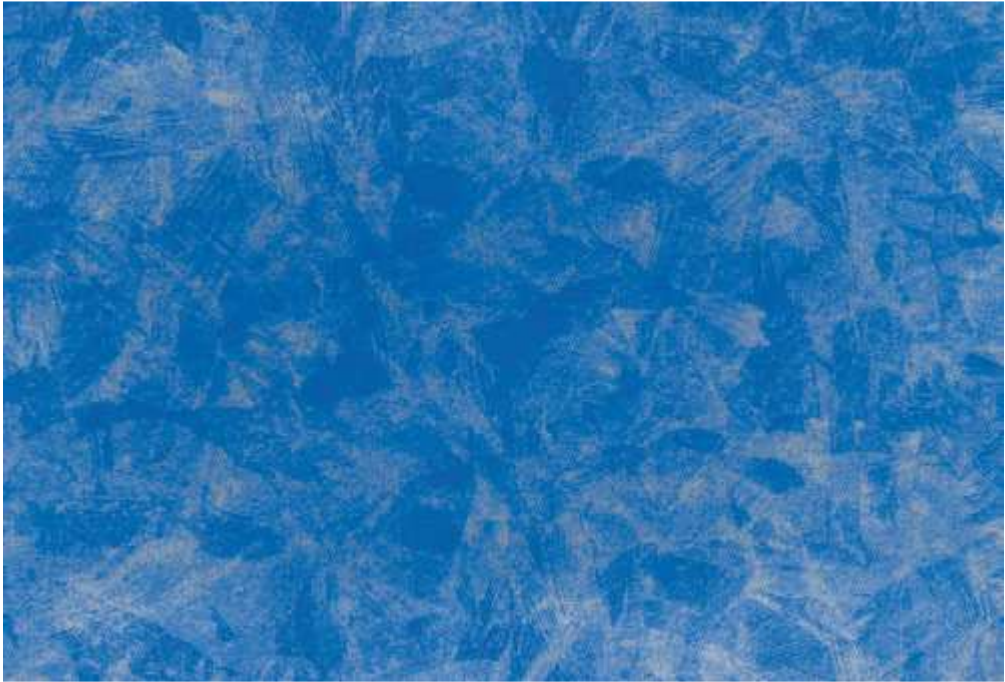


PPS30


PVC für Fußboden

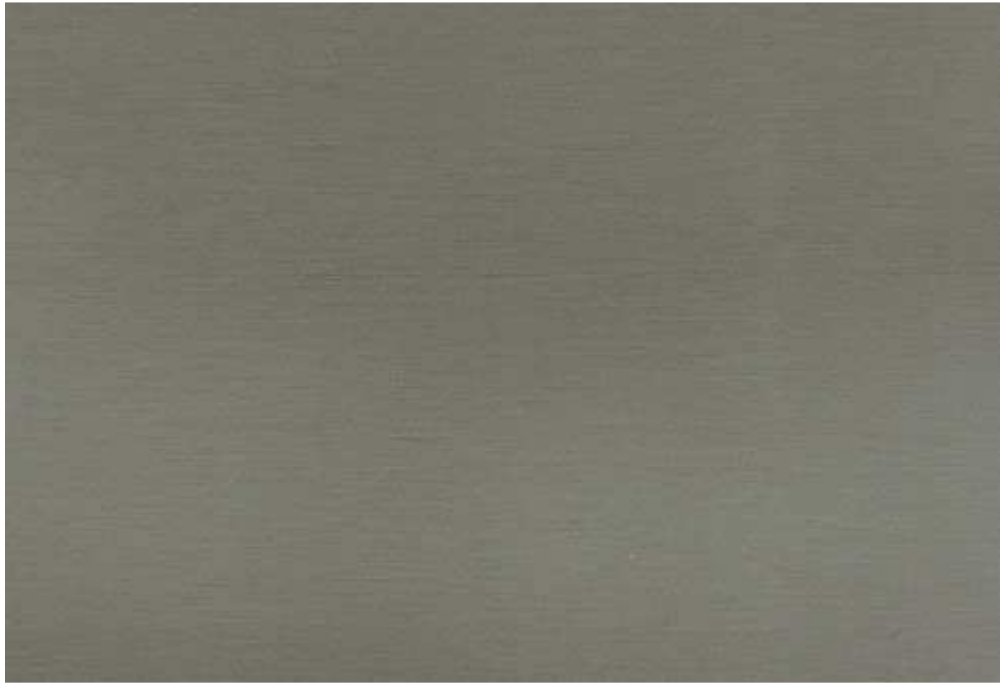


PVC STEP GRIGIO

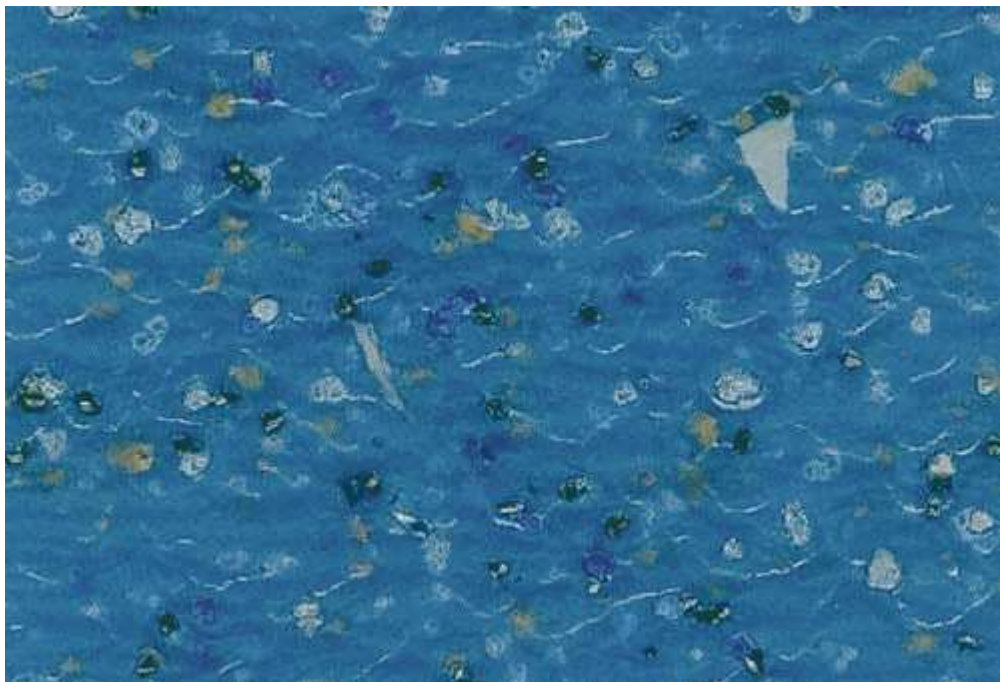


PVC STEP BLU

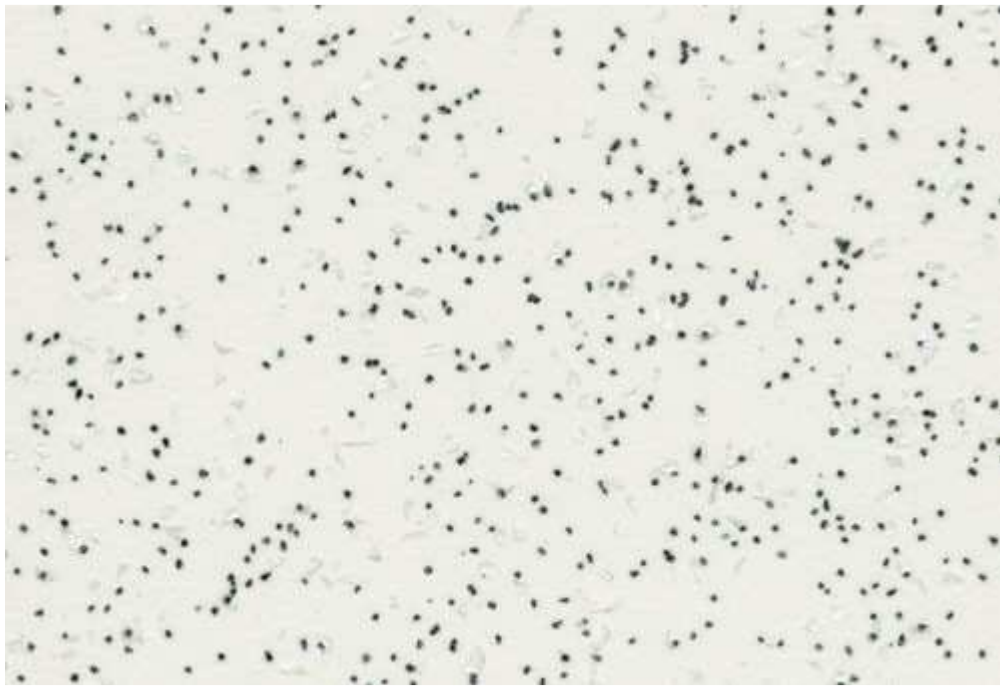

PVC STEP GHIACCIO

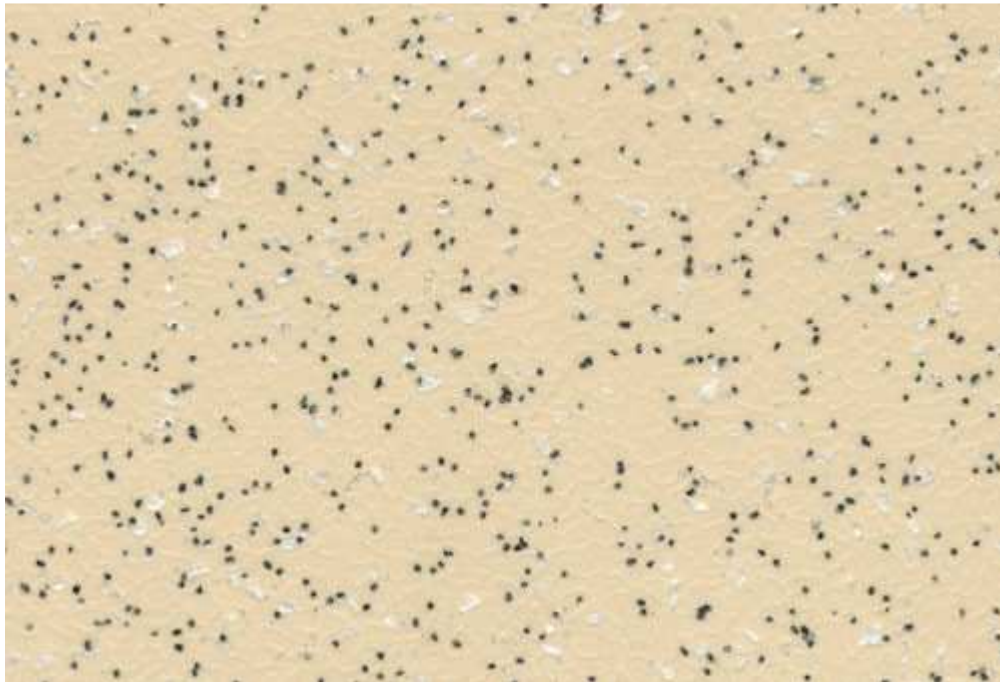

PVC STEP SABBIA

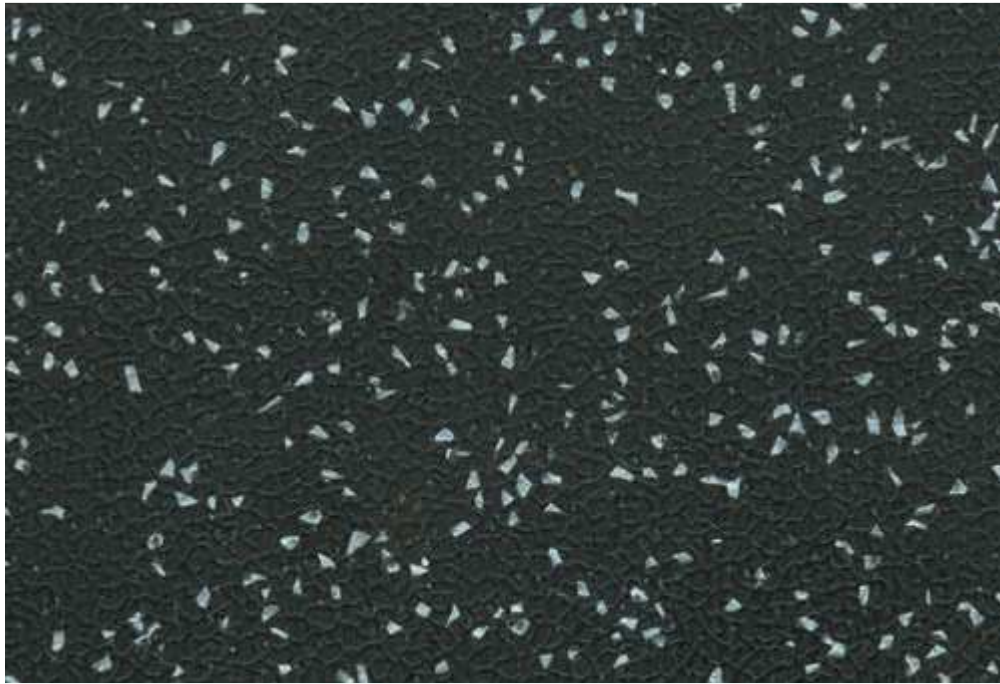


PVC STEP NERO


Granit für Fußboden




BIANCO

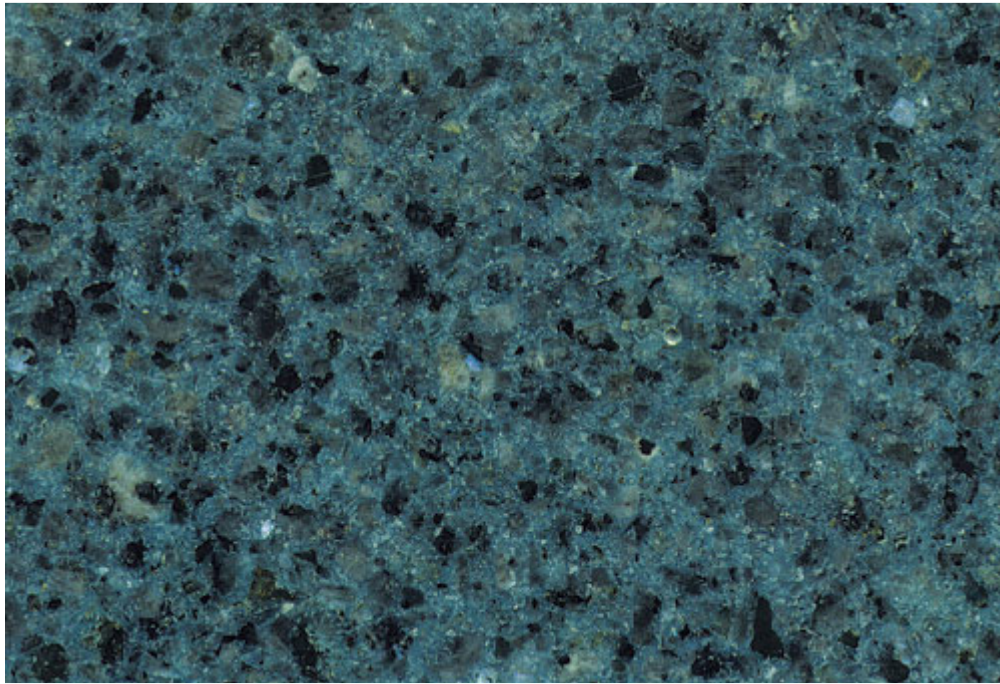


BLU MARINO

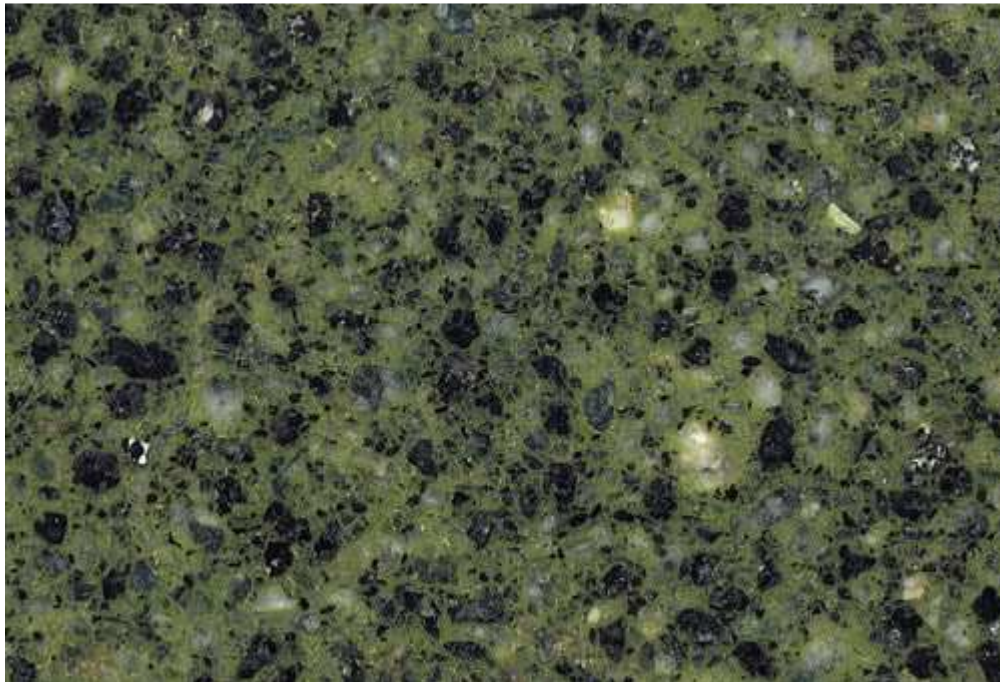

VERDE

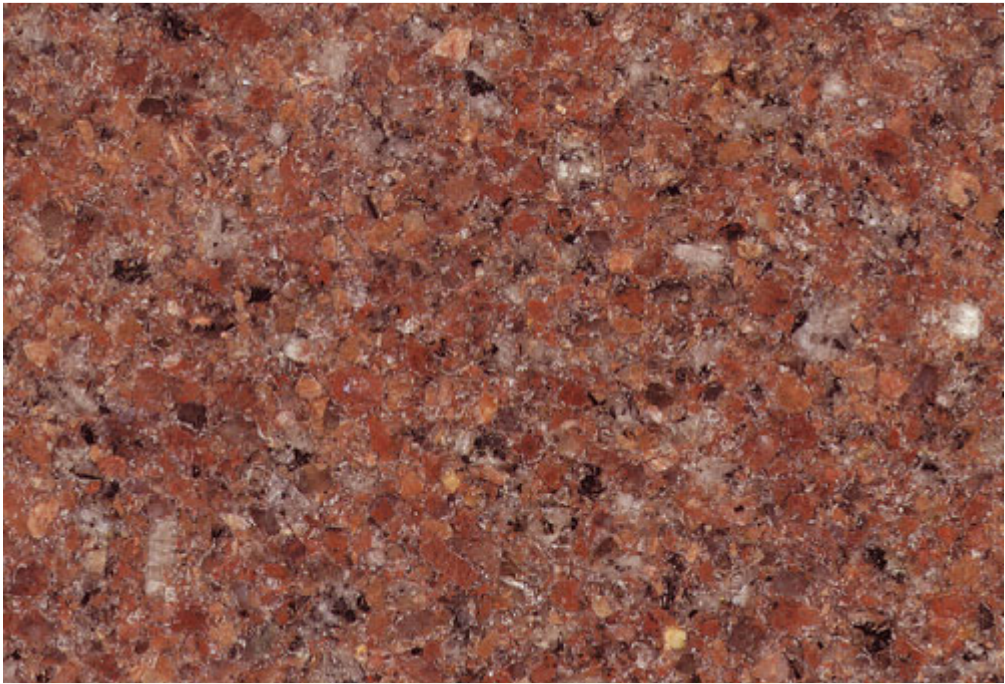


ROSSO

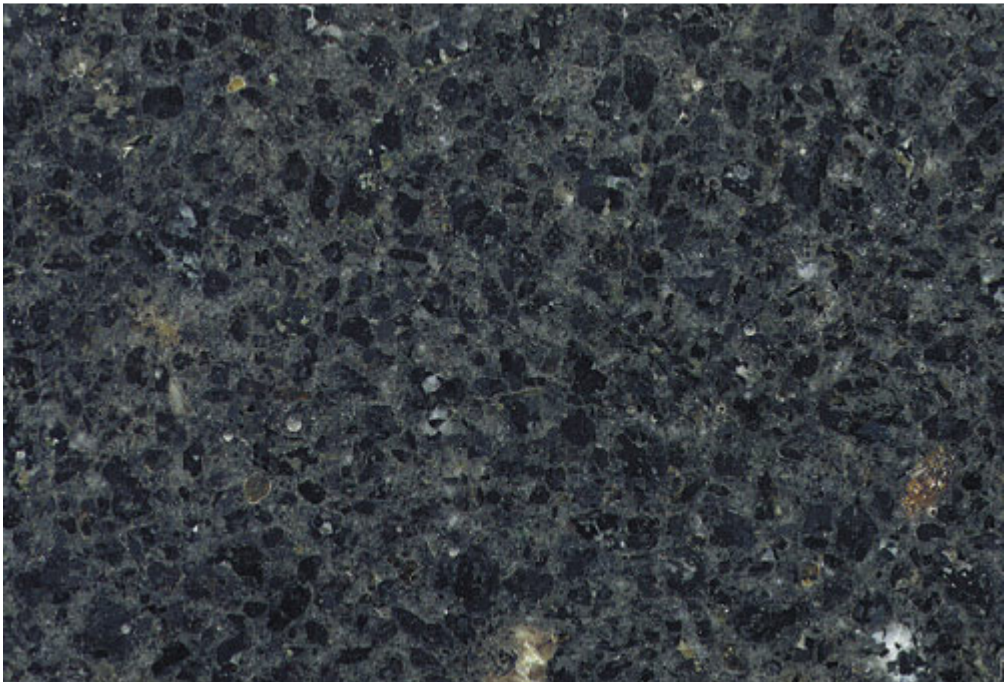


NERO




LOGOS 734

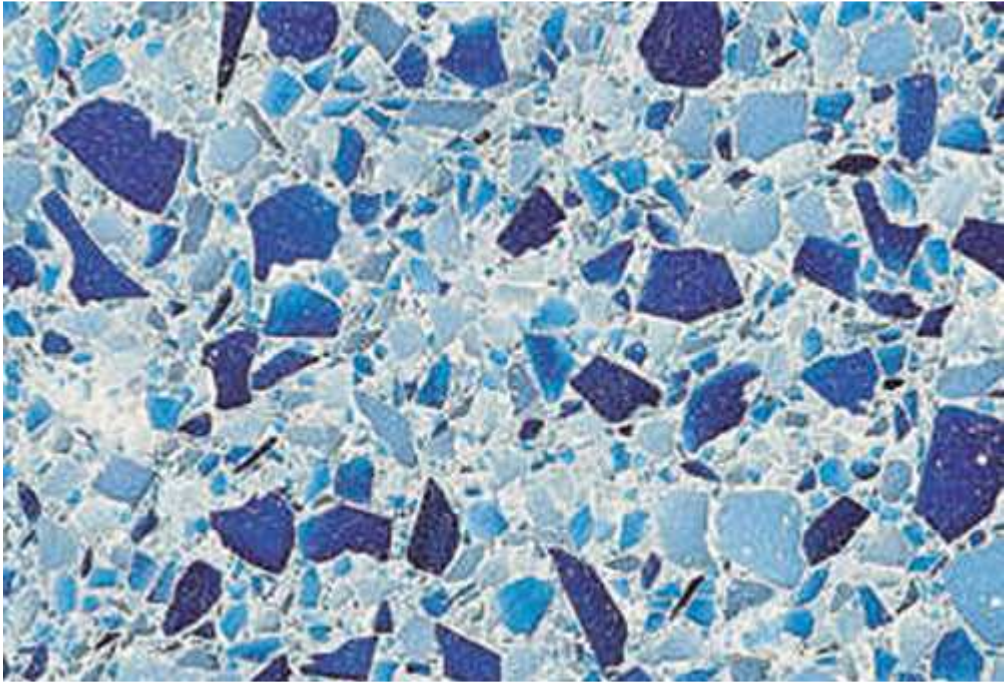

LOGOS 712

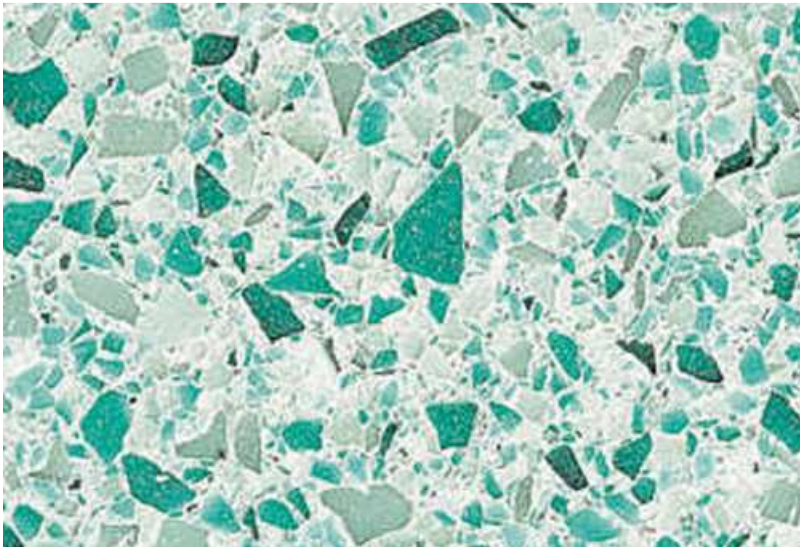

LOGOS 718

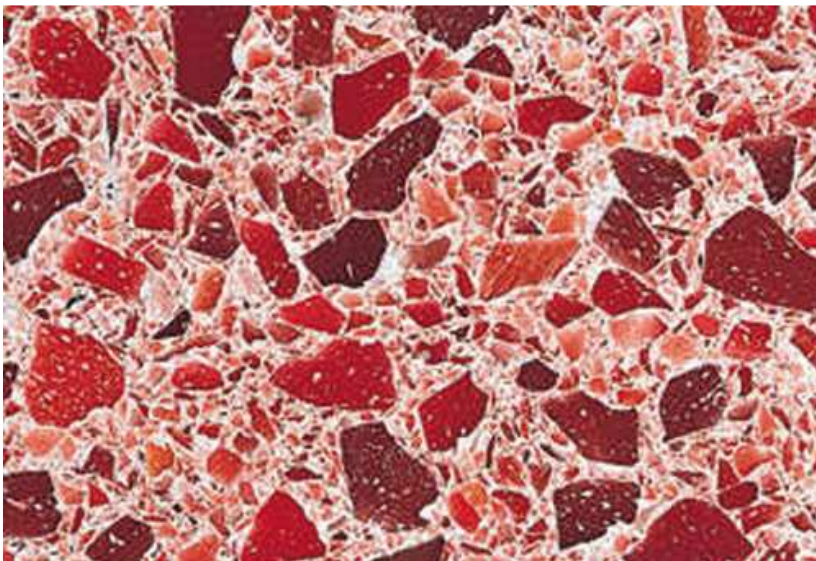

LOGOS 732



LOGOS 731